

FLOOD PROTECTION BARRIER

Recommended Flood Barrier & Flood Door Field Testing Procedures

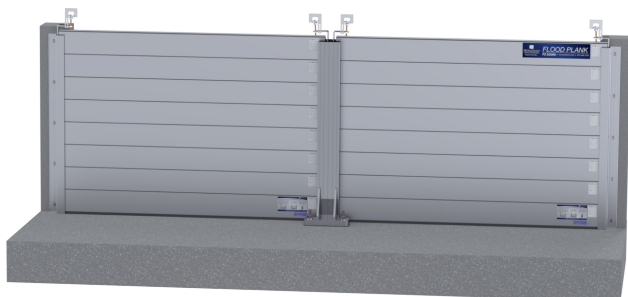


Table of Contents:

Introduction	1
Test Qualifications	2
Hydrostatic Test Procedure.....	2
Hose Test Procedure.....	3
Chalk Test Procedure	3
Troubleshooting Guide.....	4
Hydrostatic Testing Documentation Table.....	5
Hose Testing Documentation Table	6
Chalk Testing Documentation Table	7

Contact Information

Mail

PS Flood Barriers
1150 South 48th Street
Grand Forks, ND 58201

Local Phone

701.746.4519

Website

psfloodbarriers.com

Hours of Operation

8 A.M. to 5 P.M. CT

Toll Free Phone

877.446.1519

Email

4psinfo@psindustries.com

Monday – Friday

IMPORTANT! Read entire Field Testing Procedure prior to conducting testing.

NOTICE Unauthorized modification of or to the Product voids this Limited Warranty. Authorized modifications, received in writing from PS Industries® Incorporated, as long as the modification is accomplished in strict accordance with PS Industries' instructions, does not void warranty. To request product modifications contact PS Industries Incorporated, 1150 S. 48th Street, Grand Forks, ND 58201, phone 877-446-1519, email: 4psinfo@psindustries.com

I. Introduction

- A. Field testing of PS Flood Barriers™ flood barriers allows the user to validate the function, performance, and installation of the watertight system after final installation.
 1. PS Flood Barriers' flood protection products are designed and factory tested to be substantially impermeable to the passage of water. Depending on installation conditions and tolerances, leakage may occur and precautions should be taken to mitigate damage on the dry side of barriers during testing.
- B. PS Flood Barriers' flood protection products are classified as Type 2 Closures by the U.S. Army Corps of Engineers. According to the U.S. Army Corps of Engineers Flood Proofing Regulations EP 1165-2-314, 15 Dec 1995, Sec. 701.1.2 "Type 2 Closures - shall form essentially dry barriers or seals, allowing only slight seepage during the hydrostatic pressure conditions of flooding to the Regulatory Flood Datum (RFD)".
- C. Retain this document for future reference.
- D. Product registration is an essential step to protecting your product, register Online at psindustries.com/contact/register-your-product/

II. Test Qualifications

- A. A flood barrier shall be capable of withstanding the hydrostatic loads caused by floodwaters.
 - B. Acceptable leakage rates through opening barriers shall be determined by the customer based on their specific site conditions and requirements.
 - 1. Leakage rates in excess of 0.01* gallons per minute (GPM) per linear foot of wetted perimeter may indicate improper barrier function.
 - 2. The wetted opening perimeter is defined as the length of the opening width plus two times the water depth.
 - C. In the case of Pedestrian Flood Doors, subjected to water height above door hardware penetrations, leakage rates will be dependent upon customer's door hardware type and options.
 - 1. In all cases, leakage rates must be within the leakage rates established by the project specifications.
- *Leakage dependent on product type.

III. Hydrostatic Test-Field Procedure

STEP 1. Ensure flood barrier is installed according to PS Flood Barriers' installation instructions and tolerances.

STEP 2. Construct a test enclosure apparatus to subject the wet-side of the flood barrier and adjacent installation interface to hydrostatic loading.

- a. Design the apparatus in a way to minimize the volume of water required to reach the water height required for the test.
- b. The apparatus can be constructed of various materials including wood, metal, sandbags, or other materials to support the water loading up to the desired water test level.
- c. Poly sheet, tapes, expanding foam, and seasonal sealant (removable) may assist in waterproofing the test apparatus.

STEP 3. Fill the test apparatus with water to the determined test level and no greater than the maximum design water protection height as specified by PS Flood Barriers.

- a. In the case of PD-520 pedestrian (walk door) flood doors, if the test will require water submersion above door hardware elevation, the sealed hardware compartment must be manually emptied of water after the test by removing the door hardware and siphoning, vacuuming, and air drying prior to re-installing door hardware.

STEP 4. Commence test: With the test apparatus filled with water to the test level, remove all prior leakage on dry-side of flood barrier and begin a timed 15 minute leakage collection test if leakage is present.

- a. Use a wet vacuum or other means to collect water leakage for a 15 minute interval and measure volume with a device capable of precision to the nearest ounce.

STEP 5. Calculate resulting leakage rate in terms of (Gallons)/(Minute)/(Feet of wetted perimeter).

- a. The wetted opening perimeter is defined as the length of the opening width plus two times the water depth.
- b. The formula for leakage rate is provided below:

$$\frac{\text{Gallons}}{\text{Minute}} / \text{foot} = \frac{\text{Ounces Leakage}}{128 \left(\frac{\text{oz}}{\text{gal}}\right)} \times \frac{1}{15 \text{ Minutes}} \times \frac{1}{\text{Feet of wetted perimeter}}$$

STEP 6. Determine if the calculated leakage rate is less than the predetermined allowable leakage rate.

- a. Document test results. If leakage exceeds the acceptable level refer to the Troubleshooting Leakage section in this document and repeat steps 3-6.

IV. Hose Test-Field Procedure

A. In applications where the Hydrostatic Test-Field Procedure is not practical, the Hose Test-Field Procedure can assist in verifying that the product achieves continuous gasket compression and that installation junctions are watertight.

STEP 1. Perform a hose test by spraying areas of the product that have leakage potential such as gasket interfaces and between the frame and existing structure.

CRITICAL DO NOT EXCEED THE MAXIMUM DESIGN WATER PROTECTION HEIGHT.

STEP 2. The water shall be applied to the door with a smooth bore nozzle, with an internal exit diameter of $\frac{7}{16}$ inches at a rate of 4.0 gallons per minute (GPM).

STEP 3. Test water shall be sprayed perpendicularly to the barrier surface at a distance of no less than 12 inches and no greater than 18 inches.

STEP 4. Leakage rate shall not exceed the predetermined allowable leakage rate.

V. Chalk Test-Field Procedure

A. The Chalk Test provides a reasonable means of inspecting for continuous gasket contact after the initial product installation. Use large sidewalk chalk in a color that is easily visible on the gasket and the sealing surface.

STEP 1. Rub chalk onto the sealing surface, not the gasket. Be sure that the surface is evenly coated. Take special care in corners, sealed joints, and on long spans (>15ft).

STEP 2. Slowly close barrier to its fully deployed state to prevent the momentum of the barrier from causing additional gasket compression. Engage and tighten all latching, if present.

STEP 3. Open barrier and check the chalk line on the gasket for gaps in the chalk mark.

STEP 4. If there is a gap, check the corresponding point on the sealing surface where there was a break to determine the cause.
a. Adjusting latches, frame squareness, or critical sealant joints can typically remedy gasket contact issues.

STEP 5. Adjust the barrier as needed, clean chalk off the gasket surface, and repeat Step 1 through Step 4.

STEP 6. When there are no breaks in the chalk line, clean chalk off barrier and gasket with a damp rag.

VI. Troubleshooting Leakage

- STEP 1.** Refer to the Approved for Construction Drawings and Installation Instructions/ Operation and Maintenance Manual to ensure product is installed properly and within manufacturer's acceptable tolerance.
- STEP 2.** Adjust latching to allow for continuous gasket contact.
- STEP 3.** Ensure opening area and gaskets are free of debris.
- STEP 4.** Use a light source on the opposing side of the flood barrier to help identify potential leak paths.
- The presence of light passing between gaskets sealing surfaces may indicate potential leak paths.
 - Hydrostatic loading on the barrier can provide additional compression to gaskets that can aid in sealing.
- STEP 5.** Localized leakage at joining gasket junctures or corners of door can often be remedied with the use of manufacture approved sealants to create a smooth sealing surface for gaskets and fill small imperfections in the gasket contacting surfaces.
- Closely observe leakage to determine the leakage path.
 - Leakage often occurs when a gasket sealing interface transitions from one material to another or where gaskets are required to seal to the existing building structure.
 - With the barrier open or stored, apply sealant using discretion to create a smooth surface for gasket contact near observed leakage region. Where gaskets and jambs contact the floor, use a finger or caulk smoothing tool to create a small radius-ed sealant bead along base of jamb perimeters and floor.
 - Allow sealants time to partially cure prior to using flood barrier.
 - Most minor localized leakage can be remedied with sealant.



TEST PROCEDURES

Hose Testing Data Documentation Table						
PRODUCT SN	MODEL	DATE	WATER TEST HEIGHT (FT)	LEAKAGE COLLECTED IN 15 MINUTE INTERVAL	LENGTH OF WETTED PERIMETER (FT)	GALLONS PER MINUTE PER FOOT OF WETTED PERIMETER

TEST LOCATION: _____

TEST CONDUCTED BY: _____

SIGNATURE: _____

WITNESSED BY: _____

SIGNATURE: _____



TEST PROCEDURES

Chalk Testing Data Documentation Table					
PRODUCT SN	MODEL	DATE	WATER PROTECTION HEIGHT (FT)	LENGTH OF CHALKED PERIMETER (FT)	GASKET CONTACT ADJUSTMENTS

TEST LOCATION: _____

TEST CONDUCTED BY: _____

SIGNATURE: _____

WITNESSED BY: _____

SIGNATURE: _____



877.446.1519

4psinfo@psindustries.com | psfloodbarriers.com
1150 South 48th Street | Grand Forks, ND 58201

Product Registration:
psindustries.com/contact/register-your-product